
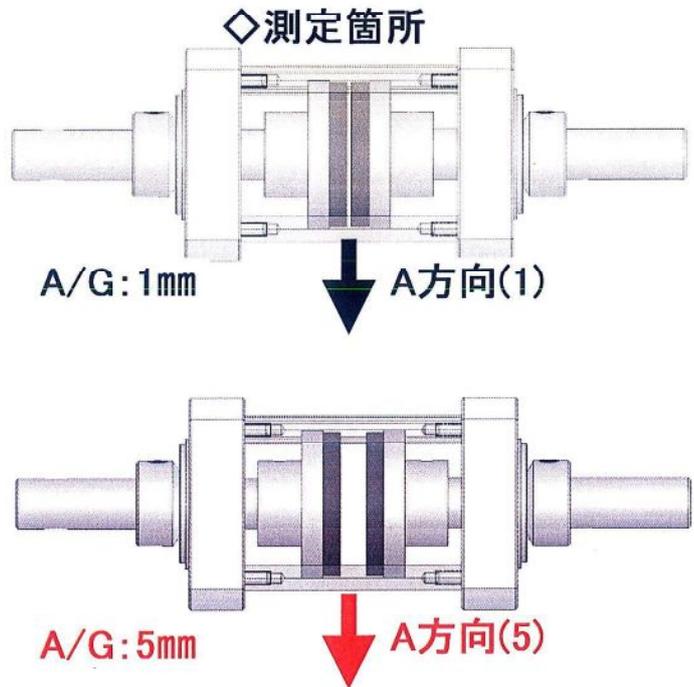



漏れ磁束密度測定結果

◇測定サンプル:カップリング
MFCP2200,MFCP3500

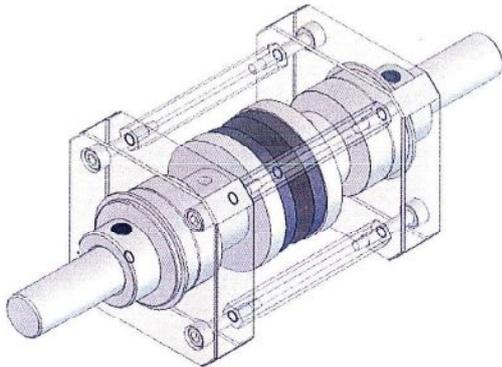


◆表1 磁束密度測定結果 単位[mT]

距離	MFCP2200		MFCP3500	
	22_1	22_5	35_1	35_5
1	35.6	91.2	52.8	152
5	0.8	5.8	3.2	21.3
10	0.2	0.5	0.4	1.7
15	0.2	0.1	0.1	0.2

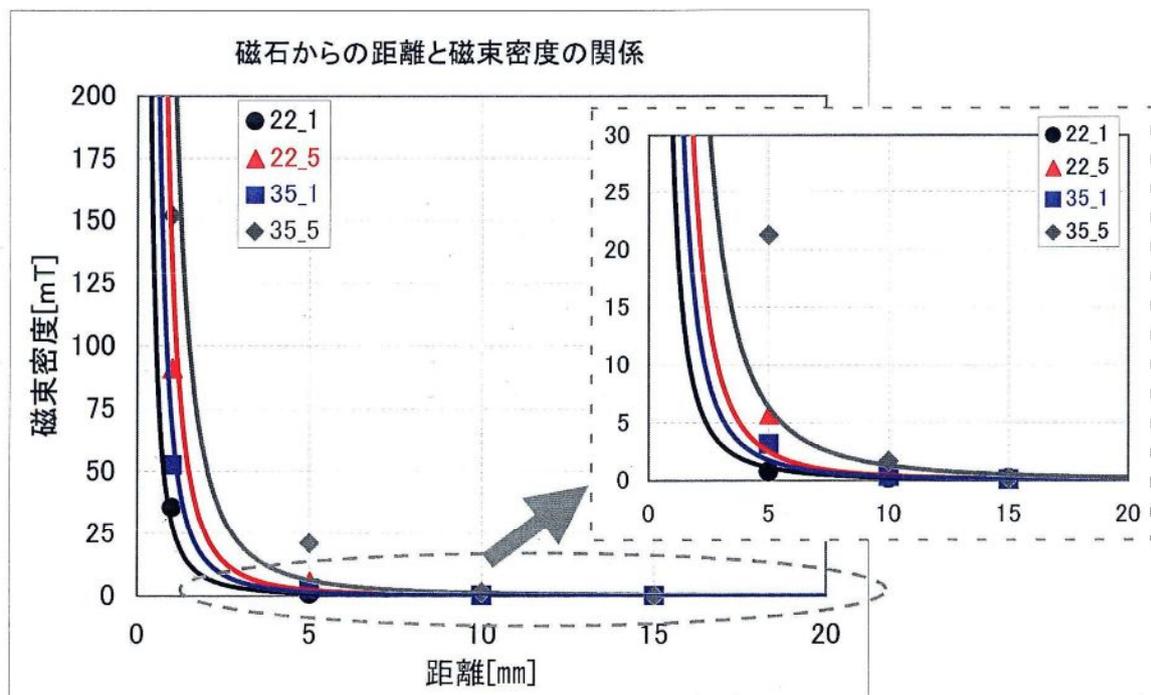


漏れ磁束密度測定結果

◇測定サンプル: 直行型
MFMP2211, MFMP3511

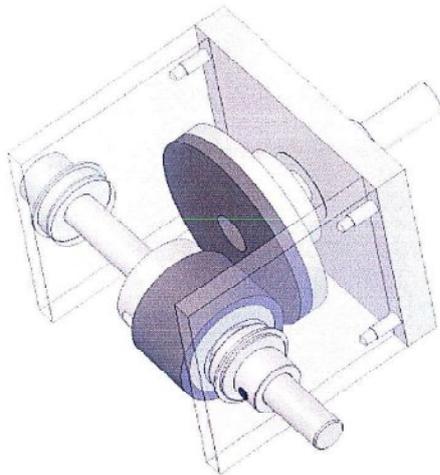

◇測定箇所

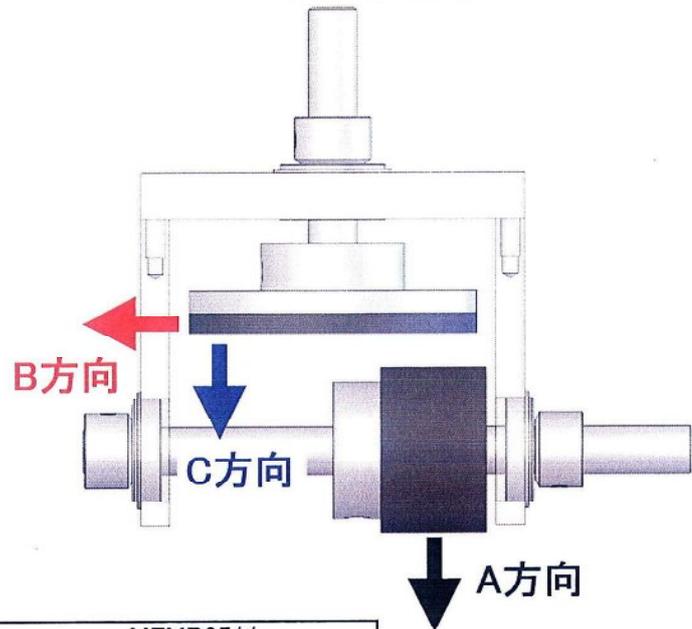

◆表1 磁束密度測定結果 単位[mT]

距離	MFMP2211			MFMP3511		
	22_A	22_B	22_C	35_A	35_B	35_C
1	398.0	68.2	274.0	362.0	147.0	186.6
5	130.9	43.2	72.6	72.9	33.4	26.7
10	36.5	17.7	18.4	8.7	9.7	6.5
15	14.3	7.7	5.5	3.6	3.7	0.4
20	5.3	3.2	2.1	1.0	1.7	0.2
25	2.4	1.9	0.6	0.4	0.8	
30	1.1	0.9	0.2	0.1	0.2	
35	0.5	0.4				
40	0.1	0.1				

